

SLAMM RAGE INSTRUCTION MANUAL



OWNER MANUAL STUNT SCOOTER

ASSEMBLY INSTRUCTIONS

1. Insert the steering tube on to the fork ensuring the bars are straight to the wheel
2. Tighten the 3 clamp bolts until firmly secure using the 5mm Allen key. Repeat before each use

DISASSEMBLING INSTRUCTIONS

1. Unscrew the 3 clamp bolts until the clamp becomes loose
2. Slide the bar tube up and remove the tube when it is free of the fork

Please check out the instruction booklet included with your Slamm Rage Scooter for all other relevant information

**ANY PROBLEMS OR QUESTIONS, PLEASE CONTACT US AT:
SALES@SLAMMSCOOTERS.COM**